

Remove the cover from the main control unit.
The receiver is located in the lower right hand corner
of the control enclosure.

[Note: The LED lights are located on the underside
of the radio receiver.]

Programming Instructions

There are either 2 or 5 buttons on the receiver marked
Mode Switch #1, #2, #3, #4, #5 (2 buttons on Non A/C units & 5 on A/C
units)

DO NOT Press Mode Switch # 5 as this one
changes the operation of the Receiver.

1. With the power to the unit turned on, press and hold
Mode Switch #1 for 6 seconds; release.
2. Press the Up button on the hand held transmitter
and hold for 3 seconds.
3. Press and hold Mode Switch #2 for 6 seconds; release.
4. Press the Down button on the hand held transmitter
and hold for 3 seconds.

**** If you're Unit is not an Auto stop Unit stop after step #4**

5. Press and hold Mode Switch #3 For 6 seconds; release.
6. Press the Stop button on the hand held transmitter
and hold for 3 seconds.

*** If you're A/C unit does not have the light option
or only 3 Buttons stop after step #6**

7. *(If your unit is equipped with the light option)
Press and hold Mode Switch #4 for 6 seconds; release.
8. Press the Yellow Light button on the hand held
transmitter and hold for 3 seconds.

Code Clearing Process (If Necessary)

With the power turned on:

- 1. Press and hold Mode Switch 1 for 7 Seconds, release Mode Switch 1 and Press and hold Mode Switch 1 again for 7 Seconds, Mode Switch 1 or Up is now cleared.**
- 2. Now Press and hold Mode Switch 2 for 7 Seconds, release Mode Switch 2 and Press and hold Mode Switch 2 again for 7 Seconds, Mode Switch 2 or Down is now Cleared.**
- 3. Now Press and hold Mode Switch 3 for 7 Seconds, release Mode Switch 3 and Press and hold Mode Switch 3 again for 7 Seconds, Mode Switch 3 or Stop is now Cleared.**
- 4. Now Press and hold Mode Switch 4 for 7 Seconds, release Mode Switch 4 and Press and hold Mode Switch 4 again for 7 Seconds, Mode Switch 4 or Light is now Cleared.**

Test the Up, Down, Stop, and Light buttons on the hand held transmitter.

There should not be any response after clearing the mode switches.

Proceed to programming instructions above